

PRESSURE/TORQUE CONVERSION CHART FOR RSL 2

Pressure PSI	ft-lbs	N-m
1000	123	167
1200	152	206
1400	180	244
1600	209	283
1800	238	323
2000	267	362
2200	296	401
2400	324	439
2600	353	479
2800	382	518
3000	411	557
3200	439	595
3400	468	634
3600	497	674
3800	525	716
4000	554	751
4200	583	790
4400	611	828
4600	640	868
4800	669	907
5000	697	945
5200	726	984
5400	754	1022
5600	783	1062
5800	811	1100
6000	840	1139
6200	868	1177
6400	897	1216
6600	925	1254
6800	954	1293
7000	982	1331
7200	1011	1371
7400	1039	1409
7600	1068	1448
7800	1096	1486
8000	1125	1525
8200	1153	1563
8400	1181	1601
8600	1210	1641
8800	1238	1679
9000	1266	1716
9200	1295	1756
9400	1323	1794
9600	1351	1832
9800	1380	1871
10000	1408	1909