

PRESSURE/TORQUE CONVERSION CHART FOR RSL 6

Pressure PSI	ft-lbs	N-m
1000	452	613
1200	561	761
1400	670	908
1600	779	1056
1800	888	1204
2000	998	1353
2200	1107	1501
2400	1216	1649
2600	1325	1796
2800	1434	1944
3000	1544	2093
3200	1653	2241
3400	1762	2389
3600	1871	2537
3800	1981	2686
4000	2090	2834
4200	2199	2981
4400	2308	3129
4600	2417	3277
4800	2527	3426
5000	2638	3577
5200	2745	3722
5400	2854	3869
5600	2964	4019
5800	3073	4166
6000	3182	4314
6200	3291	4462
6400	3400	4610
6600	3510	4759
6800	3619	4907
7000	3728	5054
7200	3837	5202
7400	3947	5351
7600	4056	5499
7800	4165	5647
8000	4274	5795
8200	4383	5942
8400	4493	6092
8600	4602	6239
8800	4711	6387
9000	4820	6535
9200	4930	6684
9400	5039	6832
9600	5148	6980
9800	5257	7127
10000	5366	7275