

PRESSURE/TORQUE CONVERSION CHART FOR RSL 4

Pressure PSI	ft-lbs	N-m
1000	290	393
1200	352	477
1400	414	561
1600	476	645
1800	538	729
2000	600	813
2200	662	898
2400	724	982
2600	786	1066
2800	848	1150
3000	910	1234
3200	972	1318
3400	1034	1402
3600	1096	1486
3800	1158	1570
4000	1220	1654
4200	1282	1738
4400	1344	1822
4600	1406	1906
4800	1468	1990
5000	1530	2074
5200	1592	2158
5400	1654	2243
5600	1716	2327
5800	1778	2411
6000	1840	2495
6200	1902	2579
6400	1964	2663
6600	2026	2747
6800	2088	2831
7000	2150	2915
7200	2212	2999
7400	2274	3083
7600	2336	3167
7800	2398	3251
8000	2460	3335
8200	2522	3419
8400	2584	3503
8600	2646	3587
8800	2708	3672
9000	2770	3756
9200	2832	3840
9400	2894	3924
9600	2956	4008
9800	3018	4092
10000	3080	4176