

## PRESSURE/TORQUE CONVERSION CHART FOR RSL 8

Pressure PSI	ft-lbs	N-m
1000	725	983
1200	884	1199
1400	1043	1414
1600	1201	1628
1800	1360	1844
2000	1518	2058
2200	1677	2274
2400	1836	2489
2600	1994	2703
2800	2153	2919
3000	2311	3133
3200	2470	3349
3400	2629	3564
3600	2787	3779
3800	2946	3994
4000	3104	4208
4200	3263	4424
4400	3422	4640
4600	3580	4854
4800	3739	5069
5000	3897	5284
5200	4056	5499
5400	4215	5715
5600	4373	5929
5800	4532	6145
6000	4690	6359
6200	4849	6574
6400	5008	6790
6600	5166	7004
6800	5325	7220
7000	5483	7434
7200	5642	7649
7400	5801	7865
7600	5959	8079
7800	6118	8295
8000	6276	8509
8200	6435	8725
8400	6594	8940
8600	6752	9154
8800	6911	9370
9000	7069	9584
9200	7228	9800
9400	7387	10015
9600	7545	10230
9800	7704	10445
10000	7862	10659