

## PRESSURE/TORQUE CONVERSION CHART FOR RSL 30

Pressure PSI	ft-lbs	N-m
1000	2298	3116
1200	2869	3890
1400	3440	4664
1600	4012	5439
1800	4583	6214
2000	5154	6988
2200	5725	7762
2400	6296	8536
2600	6868	9312
2800	7439	10086
3000	8010	10860
3200	8581	11634
3400	9152	12408
3600	9724	13184
3800	10295	13958
4000	10866	14732
4200	11437	15506
4400	12008	16280
4600	12579	17055
4800	13151	17830
5000	13722	18604
5200	14293	19378
5400	14864	20153
5600	15435	20927
5800	16007	21702
6000	16578	22476
6200	17149	23251
6400	17720	24025
6600	18291	24799
6800	18863	25574
7000	19434	26349
7200	20005	27123
7400	20576	27897
7600	21147	28671
7800	21719	29447
8000	22290	30221
8200	22861	30995
8400	23432	31769
8600	24003	32543
8800	24575	33319
9000	25146	34093
9200	25717	34867
9400	26288	35641
9600	26859	36415
9800	27431	37191
10000	28002	37965