



## Unit no. VS-22



Equipment / Functions.....: Recom. back-up fuse :  
660V-690V: 63A  
400v-480V: 63A "slow" fuse (D-characteristic, outlet for motorstarter, circuitbreaker)

- Light
- Gauge
- Safety valve

Must be coupled to vacuumtank (VS-22B), and an optional mud-tank (skip). Standard volume of skip is 2700 litres.  
Inlet coupling can also be used to blow with, but do NOT use exhaust coupling to blow with, this line does not have a safetyvalve.