



Equipment / Functions.....: MUST BE CONNECTED TO SEPERATE PUMP UNIT (PP-72B Triplex or PP-72C Centrifugal), (see separate datasheets for technical information)  
Two-piece unit, where the engine and pump has to be connected via a drive shaft, hydraulic and diesel hoses (Diesel tank is located at pump unit).  
Diesel level must be limited to 600 liters for offshore use.

- Signal to platform if : Fire and gas alarm
- Novec 1230 Fire extinguishing system
- Fire extinguisher 12kg.
- Unit is certified by Notified Body (DNV) to run without flame traps in the exhaust in hazardous area (Zone 2).

**MOTOR SHUT DOWN IF:**

- To high r.p.m on motor.
- Protective guard on pump.
- High exhaust temperature.
- Emergency stop from control room
- High coolant temperature.
- Emergency stop on remote panel.
- Emergency stop on unit.
- Low level coolant
- Low oil pressure.
- Fire alarm
- 10% Lel Gas alarm.